

UMAX



U-BAND
116HR COLOR

AKTIVACE

 
Nabíjení

Před prvním použitím nechte chytrý náramek nabíjet po dobu 45 minut.

Zařízení vyndejte z pásku.



Připojte do USB nabíječky (5V 1A) nebo USB portu počítače. Nabíjet lze jen z jedné strany. Pokud se nenabíjí, zařízením v USB portu otočte.

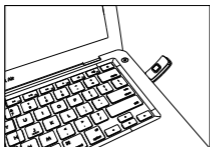**Synchronizace s aplikací ZonerHealthPro**

iOS 9.0+



Android 4.4+




Bluetooth 4.2

POUŽITÍ

Tři základní způsoby ovládání



 Kliknutí
- další menu



Posunutí
- další menu
- probuzení

 


Dlouhé stisknutí
- potvrzení
- spuštění

O ZAŘÍZENÍ

Způsob nošení

Náramek noste na ruce stejně jako hodinky.



Displej se automaticky zobrazí po zvednutí ruky a otočením zápěstí.



Pro správné měření srdečního tepu noste náramek na horní straně zápěstí a při cvičení ho více utáhněte.

Výdrž baterie

Výdrž baterie je 5-7 dnů.

Rozhraní

Posunutím po displeji přepínáte mezi hlavní obrazovkou, cvičením, funkcemi a zprávami.



ZÁKLADNÍ FUNKCE

Aktivita

Kliknutím na displej přepnete mezi kroky, srdečním tepem, kaloriemi, vzdáleností.



Srdeční tep



Získávání dat

Aktuální hodnota

Cvičení

Kliknutím na displej zvolte režim cvičení.



 
Posunutím po displeji vyberete typ sportu.




Dlouhým podržením spustíte vybraný sport.



Kliknutím na displej zobrazíte data v průběhu cvičení.



 Dlouhým podržením vypnete režim sportu. Posunutím ukončíte zobrazení dat.




Upozornění

Kliknutím na displej zobrazíte detail upozornění z aplikace.



 Posunutím zobrazíte další upozornění. Dlouhým kliknutím zprávu smažete.



Kliknutím na tuto ikonu se vrátíte na seznam zpráv a upozornění.

DALŠÍ FUNKCE

V menu funkcí je několik dalších funkcí, které zobrazíte posunutím po displeji.



 
Změna stylu hodin

Posunutím zvolíte mezi několika styly hlavní obrazovky.



Informace o zařízení

Další funkcí je zobrazení informací o zařízení.



Smazání nastavení

Dlouhým stisknutím smažete veškeré nastavení - propojení s telefonem, notifikace, alarmy.

 


Vypnutí


Dlouhým stisknutím náramek vypnete.



OSTATNÍ UPOZORNĚNÍ

**Příchozí hovor**

 Dlouhým stiskem
hovor odmítnete.

**Budík****Upozornění****Dlouhé sezení**

SERVIS

Technická podpora

Infolinka : 800 118 629

Email: support@umax.cz

Servisní středisko

ConQuest entertainment a.s.

Hloubětínská 11

198 00 Praha 9

+420 284 000 111

Provozní doba:

po-čt 9:00 - 17:00

pá 9:00 - 16:00

OTÁZKY A ODPOVĚDI

Jak nalézt zařízení pro připojení?

1. Musíte mít zapnutou funkci Bluetooth a telefon musí mít systém Android 4.4 a vyšší, iOS 9.0 a vyšší.
2. Vzdálenost mezi zařízeními a telefonem musí být méně než 0.5 metru při připojování. Po připojení musí být zařízení do vzdálenosti 10 metrů.
3. Zařízení musí mít dostatečnou kapacitu baterie.

Co dělat, když připojení Bluetooth nefunguje?

Restartujte funkci Bluetooth na telefonu nebo restartujte celý telefon.

Jak správně používat analýzu spánku?

1. Náramek musí být dostatečně utáhnut na zápěstí.
2. Pokud se probudíte a ujdete méně jak 30 kroků, systém bude stále předpokládat, že spíte.
3. Po spuštění aplikace nepřerušujte synchronizaci dat, můžete o data přijít.

Jak spustit notifikace?

V nastavení telefonu musíte povolit notifikace skrz aplikace.

Jak vypnout notifikace?

V nastavení telefonu zakážete notifikace skrz aplikace. Také můžete vypnout Bluetooth.

ACTIVATION

Charging

Before its first use fully charge the smart band for about 45 minutes.

Take the device out of its strap.



Plug the device into a USB charger (5V 1A) or a USB port on a computer. Charging works only on one side. If the device does not charge, flip it around.

**Connect to ZeronerHealthPro**

iOS 9.0+




Android 4.4+



Bluetooth 4.2


OPERATION

 Three ways of operating the device

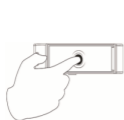


Tap the screen

 - switch menu



Slide the screen

 - switch menu
- wake up

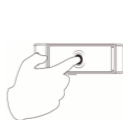


Long press

- confirmation
- turn on


ABOUT THE DEVICE

Wearing method

 Wear the device the same way as you would wear a watch.



 Raise your hand and turn your wrist around to wake up the screen.

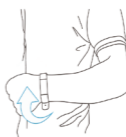

For an accurate heart rate monitoring wear the device on the upper part of your wrist and keep it tighten during an exercise.

Battery life

Average battery life is around 5-7 days.

Interface

 
Sliding on the display switches between main screen, training, functions, and messages.




ESSENTIAL FEATURES

Activity tracking

Tap the screen to display steps, heart rate, calories, distance.



Heart rate

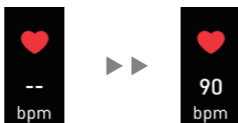 

Getting data Current heart rate

Training

Tap the screen to select training mode.



 
Slide the screen to choose a type of sport exercise.




Long press to select this sport exercise.



Tap the screen to see the data during exercise.



 Long press to turn off the sports mode. Slide up or down to exit the data display.




Notifications

Tap the screen to select messages and notifications from applications.



 Slide the screen to show next message. Long press to delete the message.



Tap this icon to return to the messages page.

OTHER FUNCTIONS

Slide the screen to see other functions.



 
Change dial face

Slide the screen to switch between other dial styles.



Device information

Show information about the device.



Delete all settings

Long press to delete all settings - phone connection, notifications, alarms.

 


Power off

Long press to power off the device.



REMINDERS




Incoming calls

Long press to reject the call.



 Alarms



Schedule



Reminder to move

SUPPORT

Technical support

Email: support@umax.cz

Service center

ConQuest entertainment a.s.

Hloubětínská 11

198 00 Praha 9

Czech Republic

+420 284 000 111

Opening hours:

po-čt 9:00 - 17:00

pá 9:00 - 16:00

FAQ

How to connect to the device?

1. Bluetooth needs to be turned on and your smart-phone needs to run Android 4.4 and higher or iOS 9.0 and higher.
2. The distance between the device and the smart-phone has to be under 0.5 m during pairing. After pairing, keep the device within 10 m.
3. Device needs to have enough battery power.

What to do if Bluetooth does not work?

Restart Bluetooth or restart your smartphone.

How to correctly analyze sleep?

1. Wear the device tightly on your wrist.
2. If you wake up and walk less than 30 steps, the system will think that you are still sleeping.
3. Do not interrupt data synchronization, the data might become corrupted.

How to enable notifications?

Turn on notifications through applications in your phone settings.

How to disable notifications?

Disable notifications through applications in your phone settings or turn off Bluetooth.

UMAX

© 2018 Umax Czech a.s.