

Instruction Manual

Thank you for purchasing this product.
Before using this product, please read the instructions carefully.
After reading the instruction manual, please keep it for reference.

Caution



 
Caution

Parents/Guardians:


Please read the following information carefully.

- Long cord. Strangulation hazard.
- Keep the product away from dusty or humid areas.
- Do not use this product if it has been damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
- Do not touch the metal parts of the USB plug.
- Do not apply strong impact or weight on the product.
- Do not pull roughly or bend the cable of the product.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.

Included

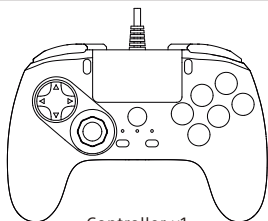

Controller x1

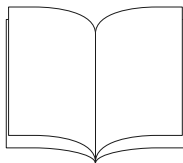 

Instruction Manual x1

Platform

PlayStation®5 console, PlayStation®4 console, PC*

* PC compatibility not endorsed by Sony Interactive Entertainment.

System requirements	USB Port, Internet Connection
---------------------	-------------------------------

 
*** Functions as PC controller through XInput.
This product does not support DirectInput.**

Important


Before using this product with your PlayStation®5 console or PlayStation®4 console, please read the included instructions carefully. Please check that your PlayStation®5 console or PlayStation®4 console is updated to the latest system software.

How to Connect


- 1 Set the Hardware Toggle Switch to the desired platform and plug in the USB cable.

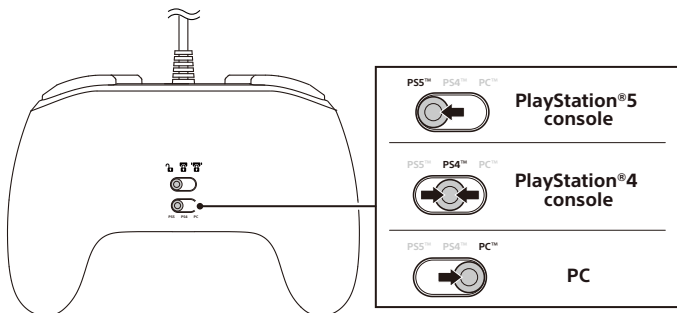

 - 2 Plug the USB cable to PlayStation®5 console / PlayStation®4 console / PC USB port.

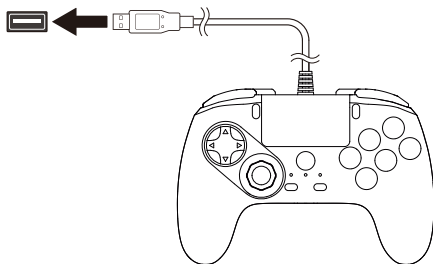

 
- 3 Press the PS Button to finish pairing.

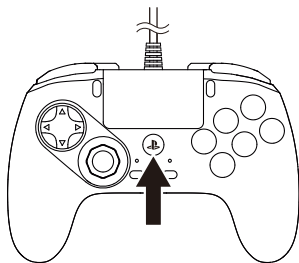

Layout

Caution

 - The PS5™ console and PS4™ console cannot be turned on with the PS Button.
- The PS Button cannot be used to return from PlayStation®5 Rest Mode or PlayStation®4 Standby Mode.
- Do not press any buttons, switches or the joystick when returning from PlayStation®5 Rest Mode or PlayStation®4 Standby Mode.
- The headset jack is not compatible with PC.
- The Touchpad and Touchpad Button are not compatible with PC.

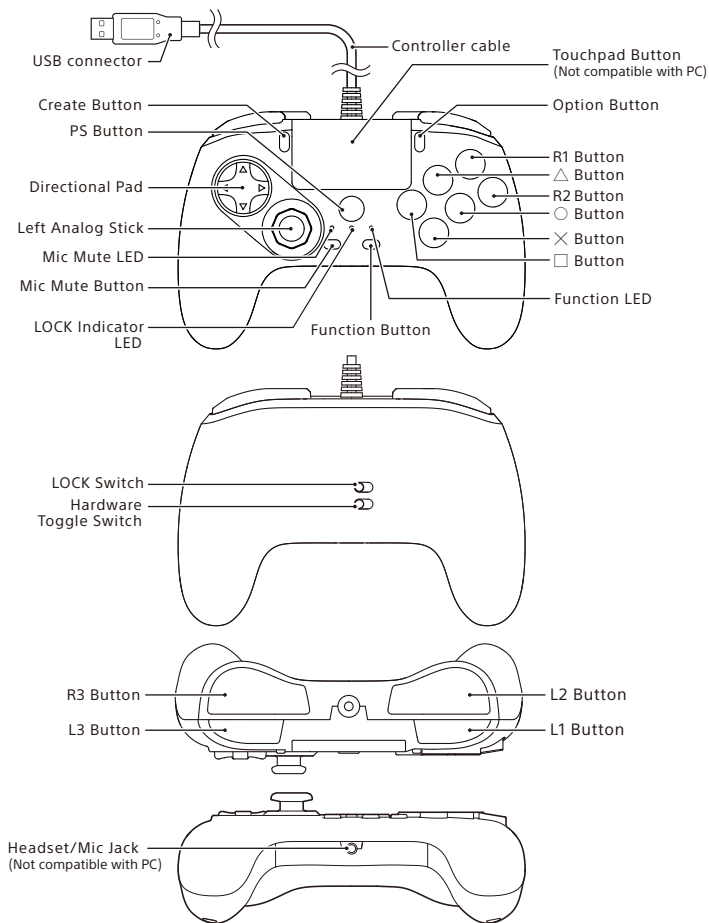

Assign Mode

 




Assignable Functions can be assigned to any of the Assignable Buttons listed below.

Assignable Buttons

○ Button / × Button / □ Button / △ Button / Directional Pad / L1 Button / R1 Button / L2 Button / R2 Button / L3 Button / R3 Button

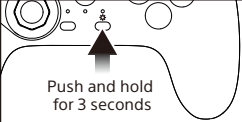 

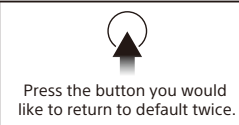 

Assignable Functions

○ Button / × Button / □ Button / △ Button / Directional Pad / L1 Button / R1 Button / L2 Button / R2 Button / L3 Button / R3 Button / NC (Button stops responding)

Operation	LED Status	Settings
<p>①</p>  <p>Push and hold for 3 seconds</p>	<p>Function LED (Red)</p>  <p>Slow Blinking</p>	<p>Assign Mode activated</p> <p>- When in Assign Mode, button inputs will be non-responsive.</p>
<p>②</p>  <p>Press the button that you want to assign the function to.</p>	<p>Function LED (Red)</p>  <p>Blinks rapidly</p>	<p>The button you want to assign is selected.</p>
<p>③</p> <p>After the button is selected in 2, press the button that has the function you want to assign.</p> <p>or</p> <p>Hold the Create Button for 3 seconds when disabling a button.</p>	<p>Function LED (Red)</p>  <p>LED On</p>	<p>Setting is complete when the function is assigned to the button pressed in ②, or when set to NC (button stops responding).</p>





- The Function LED (Red) will stay on while button functions are changed from default.
- If no buttons are pressed for more than 4 seconds at ① or ②, the Function LED (Red) will automatically turn off and Assign Mode will turn off.
- If multiple buttons were pressed in ③, the function of the last button pressed will be assigned.
- Settings will be saved even if the controller is unplugged.

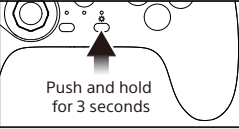[Returning One Button to Default]

Operation	LED Status	Settings
<p>①</p>  <p>Push and hold for 3 seconds</p>	<p>Function LED (Red)</p>  <p>Slow Blinking</p>	<p>When in Setting mode, all buttons on the controller will not respond.</p>
<p>②</p>  <p>Press the button you would like to return to default twice.</p>	 <p>Off</p>	<p>The button function is set to default and Assign Mode will turn off.</p>

  

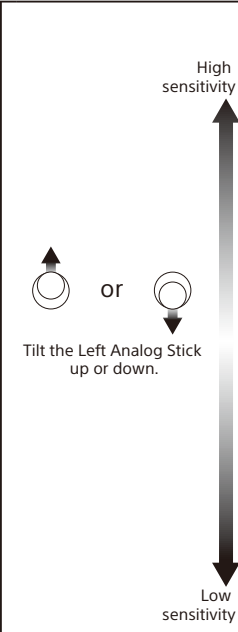 
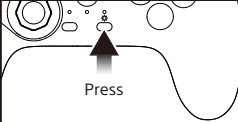 

- The Function LED (Red) will remain lit if there are buttons that are assigned with functions different from the default settings.

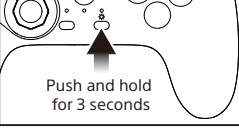[Return all Buttons to Default]

Operation	LED Status	Settings
<p>①</p>  <p>Push and hold for 3 seconds</p>	<p>Function LED (Red)</p>  <p>Slow Blinking</p>	<p>When in Setting mode, all buttons on the controller will not respond.</p>
<p>②</p>  <p>Press</p>	 <p>Off</p>	<p>All button functions are set to default and Assign Mode will turn off.</p>

- If no buttons are pressed for more than 4 seconds at ①, the Function LED (Red) will automatically turn off and Assign Mode will turn off.
- Settings will be saved even if the controller is unplugged.

Directional Pad Sensitivity Adjustment

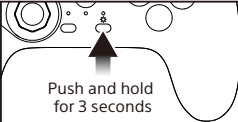Operation	LED Status	Settings																		
<p>①</p>  <p>Push and hold for 3 seconds</p>	<p>Function LED (Red)</p>  <p>Slow Blinking</p>	<p>When in Setting mode, all buttons on the controller will not respond.</p>																		
<p>②</p>  <p>Tilt the Left Analog Stick up or down.</p>	<p>The sensitivity level will increase or decrease by one level each time the Left Analog Stick is tilted up or down.</p> <table border="1"><tbody><tr><td data-bbox="467 432 534 552">1 Blink</td><td data-bbox="539 432 669 552">Slow Blinking</td><td data-bbox="721 432 964 552">Input sensitivity level 1</td></tr><tr><td data-bbox="467 560 534 679">2 Blink</td><td data-bbox="539 560 669 679">Slow Blinking</td><td data-bbox="721 560 964 679">Input sensitivity level 2</td></tr><tr><td data-bbox="467 687 534 807">3 Blink</td><td data-bbox="539 687 669 807">Slow Blinking</td><td data-bbox="721 687 964 807">Input sensitivity level 3</td></tr><tr><td data-bbox="467 815 534 935">4 Blink</td><td data-bbox="539 815 669 935">Slow Blinking</td><td data-bbox="721 815 964 935">Input sensitivity level 4</td></tr><tr><td data-bbox="467 943 534 1062">5 Blink</td><td data-bbox="539 943 669 1062">Slow Blinking</td><td data-bbox="721 943 964 1062">Input sensitivity level 5</td></tr><tr><td data-bbox="467 1070 534 1190">6 Blink</td><td data-bbox="539 1070 669 1190">Slow Blinking</td><td data-bbox="721 1070 964 1190">Input sensitivity level 6</td></tr></tbody></table>	1 Blink	Slow Blinking	Input sensitivity level 1	2 Blink	Slow Blinking	Input sensitivity level 2	3 Blink	Slow Blinking	Input sensitivity level 3	4 Blink	Slow Blinking	Input sensitivity level 4	5 Blink	Slow Blinking	Input sensitivity level 5	6 Blink	Slow Blinking	Input sensitivity level 6	
1 Blink	Slow Blinking	Input sensitivity level 1																		
2 Blink	Slow Blinking	Input sensitivity level 2																		
3 Blink	Slow Blinking	Input sensitivity level 3																		
4 Blink	Slow Blinking	Input sensitivity level 4																		
5 Blink	Slow Blinking	Input sensitivity level 5																		
6 Blink	Slow Blinking	Input sensitivity level 6																		
<p>③</p>  <p>Press</p>	 <p>Off</p>	<p>Settings complete</p>																		

- If no buttons are pressed for more than 4 seconds during ① or the Left Analog Stick is not tilted up/down during ②, the Function LED (Red) will automatically turn off and the Directional Pad Sensitivity function will turn Off.

LOCK Function

Some inputs can be disabled by using the LOCK Switch. In LOCK Mode, the functions listed in the table below are disabled.

	LOCK Indicator LED Off	LOCK Function Off
	LOCK Indicator LED On	PS Button / Touchpad Button Off
	LOCK Indicator LED On	PS Button / Touchpad Button / Create Button / Option Button Off

Download App

『HORI Device Manager』

Please download and install the "HORI Device Manager" from this product's website using your PC.

URL : <https://hori.jp/manual/p5/spf-023/>

The following features can be adjusted in the app:

- D-Pad Input Settings
- Assign Mode
- Profile

Main Features

External Dimensions : 170mm × 90mm × 48mm

Weight : 250 g

Cable Length : 3.0m

Simplified Declaration of Conformity

Hereby, HORI declares that this product is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://hori.co.uk/consumer-information/>

For UK: Hereby, HORI declares that this product is in compliance with the relevant statutory requirements.

The full text of the declaration of conformity is available at the following internet address:

<https://hori.co.uk/consumer-information/>

THE FCC WANTS YOU TO KNOW

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The normal function of the product may be disturbed by strong electro-magnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual (How to connect). In case the function does not resume, please relocate to an area which does not have electro-magnetic interference to use the product.

The wires are not to be inserted into socket-outlets.

The packaging must be retained since it contains important information.

PRODUCT DISPOSAL INFORMATION

Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste. Applicable to EU countries and Turkey only.



EU and Turkey only

US

Warranty

HORI warrants to the original purchaser that the product purchased new in its original packaging shall be free of any defects in material and workmanship for a period of 1 year from the original date of purchase. If the warranty claim cannot be processed through the original retailer please contact HORI customer support directly at info@horiusa.com. Please visit <http://stores.horiusa.com/policies/> for warranty details.

EU

Warranty

For all warranty claims made within the first 30 days after purchase, please check with the retailer where the original purchase was made for details. If the warranty claim cannot be processed through the original retailer or for any other inquiries pertaining to our products, please contact HORI customer support directly at info@horiuk.com.