

UMAX U-SONIC WHITE



••• FUNKCE KARTÁČKU

» CLEAN

Režim pro každodenní čištění zubů.
Rychlost 34 800 kmitů/min.

» WHITE

Režim pro bělení zubů. Dvě minuty čištění pro odstranění nečistot a dalších 30 sekund pro vyleštění zubů.
Rychlost 33 000 - 40 000 kmitů/min.

» POLISH

Režim pro zářivý úsměv, leštění zubů.
Rychlost 35 000 kmitů/min.

» SOFT

Jemné čištění zubů a dásní.
Rychlost 33 000 kmitů/min.

» SENSITIVE

Čištění citlivých zubů a dásní. Také vhodné pro začínajícího uživatele.
Rychlost 28 200 kmitů/min.



••• POUŽITÍ KARTÁČKU

» 1

Hlavu kartáčku připojte k tělu kartáčku.



» 2

Kartáček navlhčete a naneste zubní pastu.



» 3

Kartáček přiložte k zubům, a poté ho spusťte.



» 4

Hlavu kartáčku postupně posouvajte po všech zubech. Není nutné kartáčkem posouvat ze strany na stranu a nahoru a dolů jako u normálního kartáčku. Každých 30 sekund budete upozorněni krátkou pauzou na změnu strany úst.



••• ČIŠTĚNÍ KARTÁČKU

» 1

Kartáček pravidelně čistěte. Pod tekoucí vodou umejte hlavu kartáčku.

» 2




Stejným způsobem umyjte tělo kartáčku.

» 3

Jemným hadříčkem utřete tělo a hlavu kartáčku, a také nabíjecí základnu. Můžete použít mýdlo.

» 4

Tělo kartáčku a nabíjecí základnu nedávajte do myčky.

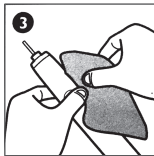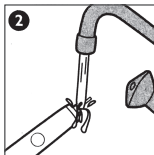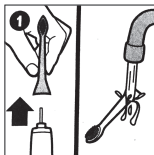

••• NABÍJENÍ KARTÁČKU

» 1

Před prvním použitím nechte nabíjet po dobu dvanácti hodin.

» 2


Na vybitou baterii budete upozorněni zavibrováním. Také se rozsvítí indikátor vybité baterie.

» 3

Kartáček vložte do nabíjecí základny. Při nabíjení indikátor baterie bliká.

» 4

Při plném nabití indikátor baterie svítí.

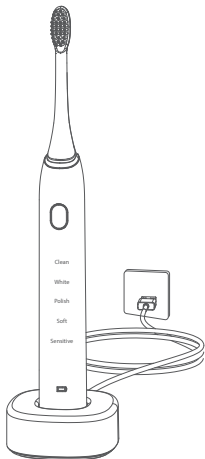

••• UPOZORNĚNÍ

» 1

Nabíjecí základnu dávejte mimo vodu. Nepokládejte ji blízko vody, například na umyvadlo. Nabíjecí základnu neponořujte pod vodu. Po čištění zkontrolujte, zda je základna kompletně suchá předtím než ji zapojíte.

» 2

Hlavu kartáčku, tělo kartáčku a nabíjecí základnu nedávejte do myčky.

» 3

Kartáček nepoužívejte ve sprše a ve vaně.

» 4

Pokud jste měli operaci zubů nebo dásní v předchozích dvou měsících, zkonzultujte použití nejdříve se zubařem.

» 5

Hlavu kartáčku vyměňte každé tři měsíce.

••• PODPORA

» TECHNICKÁ PODPORA

Infolinka: 800 118 629

Email: support@umax.cz

» SERVISNÍ STŘEDISKO

ConQuest entertainment a.s.

Hloubětínská 11

198 00 Praha 9

+420 284 000 111

Provozní doba:

po-čt 9:00 - 17:00

pá 9:00 - 16:00

••• TOOTHBRUSH MODES

» CLEAN

Mode for everyday use.

Speed 34 800 strokes/min.

» WHITE

Mode for teeth whitening. First two minutes for plaque removal followed by 30 seconds for teeth polishing.

Speed 33 000 - 40 000 strokes/min.

» POLISH

Mode for a shining smile and teeth polishing.

Speed 35 000 strokes/min.

» SOFT

Soft cleaning of teeth and gums.

Speed 33 000 strokes/min.

» SENSITIVE

Mode for cleaning of sensitive teeth and gums.

Also good for beginners.

Speed 28 200 strokes/min.



••• HOW TO USE

» 1

Connect the head of the toothbrush to the body.



» 2

Wet the toothbrush bristles and put on a toothpaste.



» 3

Put the toothbrush next to your teeth and then turn it on.



» 4

Slowly move the toothbrush head over all teeth. It is not necessary to move the toothbrush up and down and left and right like you would do using a regular toothbrush. Every 30 seconds there is a short pause to indicate that you should change position.



••• CLEANING OF TOOTHBRUSH

» 1

Clean your toothbrush regularly. Wash the toothbrush head under running water.

» 2




Wash the toothbrush body in the same way.

» 3

Dry the toothbrush head, body, and charging base using a soft cloth. You can also use soap.

» 4

Do not put the toothbrush body and charging base into a dishwasher.

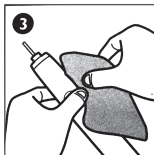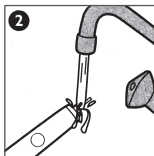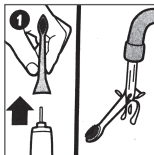

••• CHARGING

» 1

Charge the toothbrush for 12 hours before first use.

» 2


The toothbrush will vibrate to indicate low battery power. The LED battery indicator will lit up.

» 3

Put the toothbrush into the charging base. The LED indicator will be blinking during charging.

» 4

When the battery is fully charged, the battery indicator will lit up.

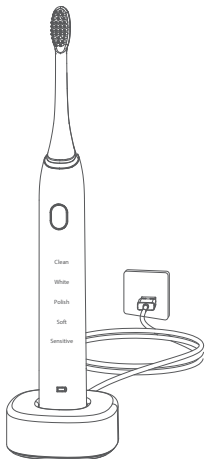

••• WARNINGS

» 1

Keep charging base away from water. Do not place it near wet areas, such a washbasin. Do not put the charging base under water. After cleaning, make sure that the charging base is completely dry before plugging it in.

» 2

Do not put the toothbrush head, body, and charging base into dishwasher.

» 3

Do not use the toothbrush in a shower or bathtub.

» 4

If you have had a teeth or gum operation in the previous two months, consult your dentist first about using the toothbrush.

» 5

Replace the toothbrush head every three months.

••• SUPPORT**» TECHNICAL SUPPORT**

Email: support@umax.cz

» SERVICE CENTER

ConQuest entertainment a.s.

Hloubětínská 11

198 00 Praha 9

+420 284 000 111

Opening Hours:

mon-thu 9:00 - 17:00

fri 9:00 - 16:00

UMAX

© 2018 Umax Czech a.s.